

CLEANING AND STORAGE

- To clean your fan, first turn it OFF and UNPLUG the unit.
- Use a soft cloth to wipe the housing. DO NOT use water or any other chemical solution or cleaner. DO NOT soak or immerse the fan in water or liquid.
- DO NOT ATTEMPT TO TAKE THE FAN APART.
- Store in a dry place away from excessive heat and direct sunlight.
- Regular cleaning will ensure optimum performance and appearance of the fan.
- DO NOT kink the power cord when storing or while in use.

**HAVE A PROBLEM? DO NOT RETURN TO PLACE OF PURCHASE.
PLEASE CONTACT CUSTOMER SERVICE.**

*Should you have any questions or comments please contact us at:
customerservice@blackstoneltd.com
1-888-525-7969*

WARRANTY: This fan combo includes a one (1) year warranty, which covers manufacturer defects and workmanship under normal use. Warranty is offered only to the original purchaser. Proof of purchase is required. Proof of purchase constitutes a dated sales receipt. This warranty is void if the fan(s) have been subject to abuse such as: being dropped which could result in damage to the fan cabinets, motors, fan controls, etc. immersion in or exposure to water, exposure to excessive heat, outdoor usage, any use other than household use, disassembly, repair or alteration by anyone other than an authorized service provider, use on improper voltage or current, or any use contrary to the user instructions. Batteries and battery life are not covered in this warranty. No other warranties are expressed or implied. To receive coverage under this warranty, contact customer service for consultation and/or replacement. **DO NOT attempt to repair any electrical or mechanical functions of this product; doing so will void this warranty.**

 
Distributed by:
Blackstone International, Ltd.
2018 Lord Baltimore Dr.
Windsor Mill, MD 21244
customerservice@blackstoneltd.com
1-888-525-7969

©2016 Blackstone International Ltd. Sunter Fans™ and other trademarks are the property of the respective owners. All other brand names and logos are registered trademarks of their respective owners. Specifications are subject to change without notice.

SUNTER™

13-INCH PERSONAL FAN INSTRUCTION MANUAL

MODEL: SFC-2016
VOLTAGE: 120V AC
FREQUENCY: 60Hz
CURRENT: 0.35A

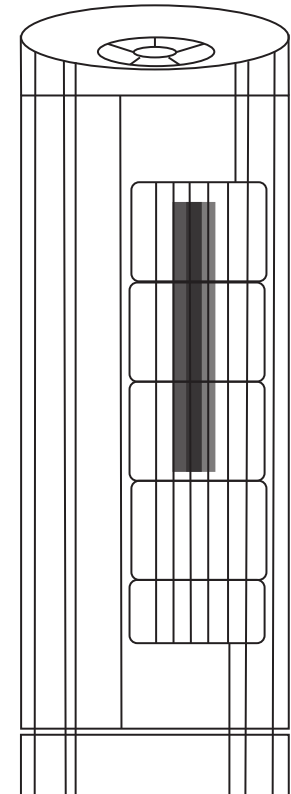

PLEASE READ, UNDERSTAND AND FOLLOW BEFORE USING

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

PLEASE READ AND SAVE THESE INSTRUCTIONS

WHEN USING ELECTRICAL APPLIANCES, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND INJURY TO PERSON OR PROPERTY, INCLUDING THE FOLLOWING:

- Read all instructions before using this product.
- Use this fan only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock or injury to person or property and may void the warranty, and/or void user's authority to operate the equipment.
- Always unplug unit before assembly, disassembly or cleaning.
- Always unplug unit when not in use, when moving from one location to another and before cleaning.
- To disconnect, grasp the plug and pull it from the wall outlet. DO NOT unplug by pulling on cord.
- The use of attachments is not recommended nor sold by the manufacturer and may cause hazards.
- Avoid contact with moving parts.
- DO NOT operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- DO NOT operate the fan in the presence of explosive and/or flammable fumes.
- DO NOT place the fan or any parts near an open flame, cooking or other heating appliances.
- Extreme caution is necessary when fan is used by or near children and whenever the fan is left operating and unattended.
- This product is intended for household use only and not for commercial or industrial use.
- DO NOT use outdoors.
- Always use on a dry, level surface.
- DO NOT operate if the fan housing is removed or damaged.
- A loose fit between the AC outlet and plug may cause overheating of the plug; consult a qualified electrician.
- DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions. If the replacement fuse blows, the product should be discarded or returned to an authorized service facility for examination or repair.
- DO NOT connect the fan to any power sources other than a 120V alternating current polarized outlet.
- This product contains a button battery. If swallowed, it could cause severe injury or death in just 2 hours. Seek medical attention immediately.

NOTE:

 
To reduce the risk of fire, electrical shock and injury to person or property, avoid plugging this product into extension cords. The extension cord could overheat. If the use of an extension cord is necessary, use a short extension cord that is UL or ETL listed to decrease the chance of overheating. Do not plug the fan into any cord connected devices. This includes surge protectors, multiple outlet adapters, and power strips.

■ **WARNING:** To reduce the risk of electric shock, DO NOT use this fan with any solid-state speed control and DO NOT insert finger or any object into grill.

■ **POLARIZED PLUG:** This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. DO NOT attempt to change this safety feature.


USER SERVICING INSTRUCTIONS

- A.** To disconnect, grasp the plug and pull it from the wall outlet. DO NOT unplug by pulling on cord.
- B.** Open fuse cover. Slide open fuse access cover on top of plug towards the blades. (See Fig. 1)
- C.** Remove the fuse by removing it carefully making sure not to break the fuse. (See Fig. 2)
- D.** Risk of fire. Replace fuse only with a 5A, 125V fuse.
- E.** Close fuse cover. Slide close the fuse access cover on top of plug. (See Fig. 3)

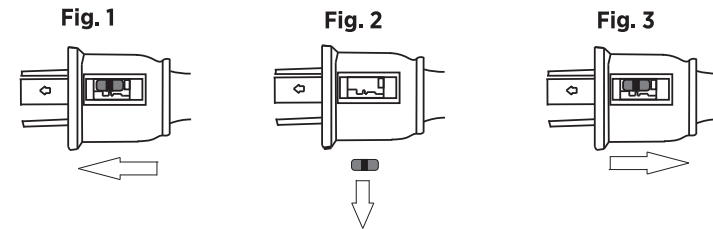


NOTICE:

 - 1.** When you replace the fuse, DO NOT operate suddenly or overexert to reduce the risk of damage.
- 2.** If you experience difficulty replacing the fuse contact a qualified electrician to help.

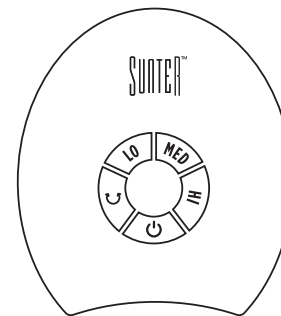

 - ⏻ - Turns fan on/of
- LO - Fan speed low
- MED - Fan speed medium
- HI - Fan speed high

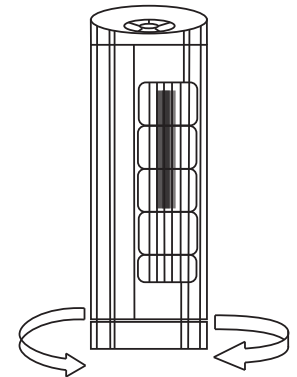

- ↺ - Oscillating Selection: Starts and stops the oscillation of the fan.