 


# CASCADE

## Handheld Misting Fan

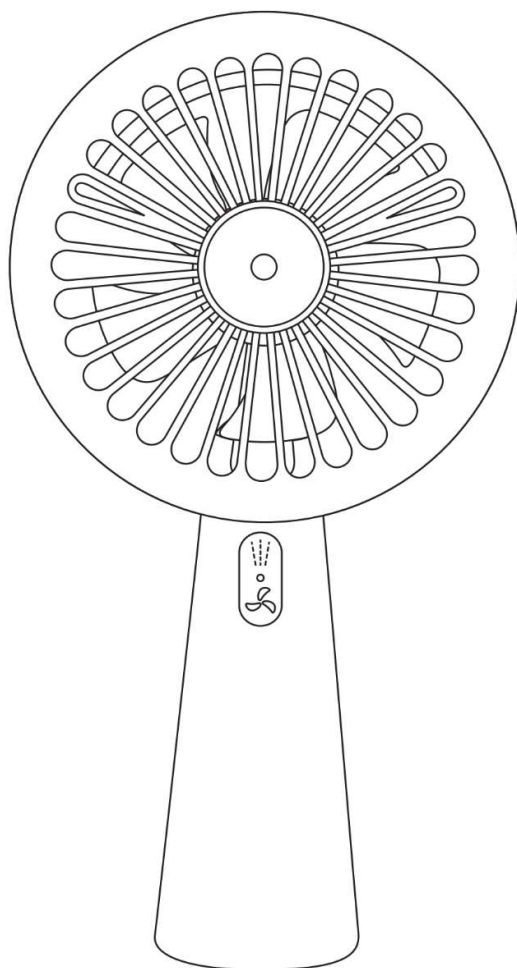 


**PLEASE READ, UNDERSTAND AND FOLLOW BEFORE USING. SAVE THESE INSTRUCTIONS**


**Warnings:**

- This fan is not a toy. Keep away from small children.
- Do not allow hair to get tangled in the fan blades.
- Do not submerge.
- Do not disassemble this product.
- Do not use any liquid other than water in the fan's water tank.
- Drain all water out of the fan's water tank before storing the fan.
- Do not expose the fan to high temperatures.
- Do not charge the fan for more than 8 hours.
- Do not use the fan if any of the components appear to be damaged.
- Turn off fan when it is not in use.
- To avoid injury, do not place fingers near the fan blades.
- Do not insert foreign objects into the protective cage surrounding the fan blades.
- The fan will automatically shut off when the battery charge is depleted.


## Components:

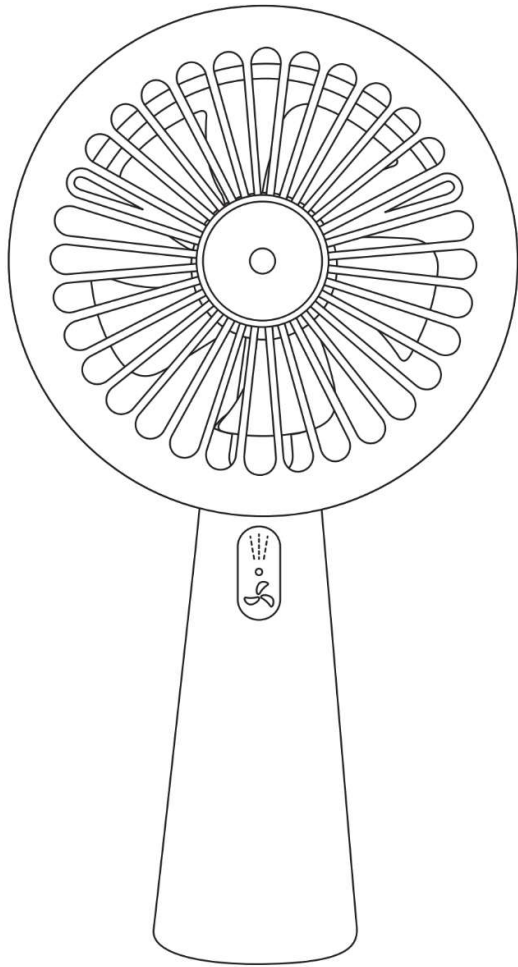

1 Misting Fan

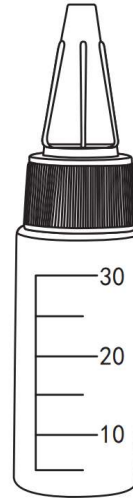 


1 Water Bottle

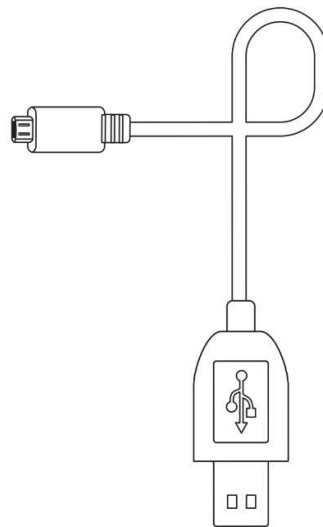

1 Charging Cable


## Instructions:

**Turning the fan ON:** Be sure that the fan has been fully charged and is ready for use.

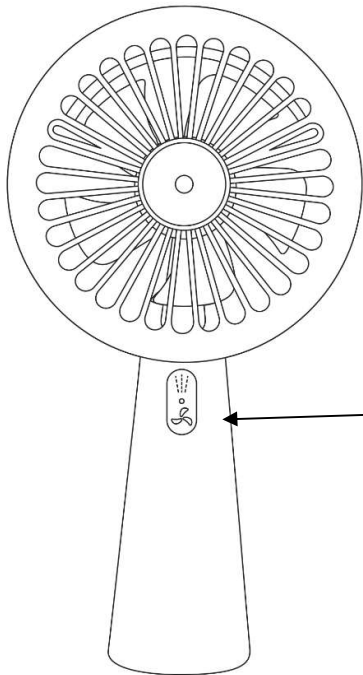

- 1) Press and hold the fan icon button for 2 seconds to turn the fan ON. The fan will start in the lowest speed setting.

**Changing fan speeds and turning the fan OFF:**

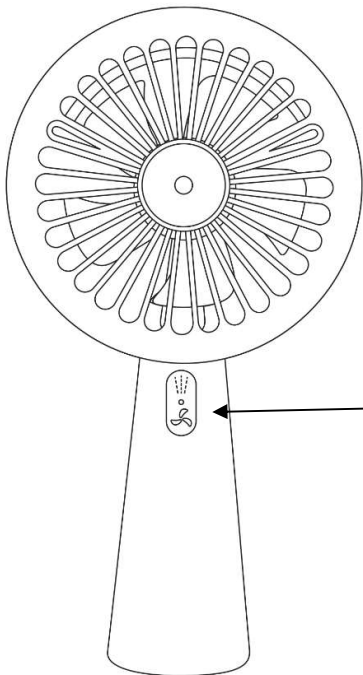


- 1) Once the fan is on, to change fan speed, briefly press the fan icon button to increase the fan speed.
- 2) Function when the fan is on and operating in the low-speed setting:

**1<sup>st</sup> Button Press:** Medium Fan Speed

**2<sup>nd</sup> Button Press:** High Fan Speed

**3<sup>rd</sup> Button Press:** Turn Fan OFF


### Turning ON the misting function:

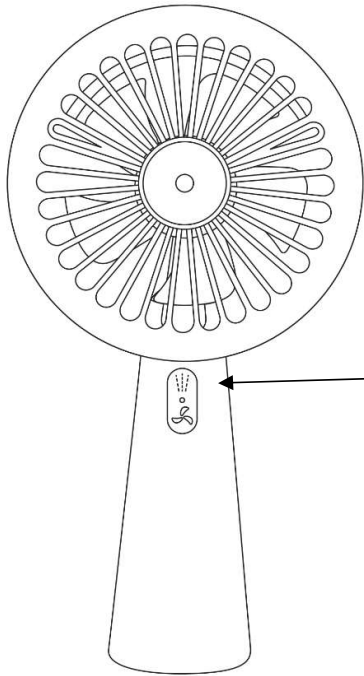

- 1) Turn the fan ON so that it is operating in the low-speed setting.
- 2) Briefly press the mist icon button to turn the mister ON.


\*The misting function will operate on any fan speed setting (low, medium, high)

### Charging the fan:

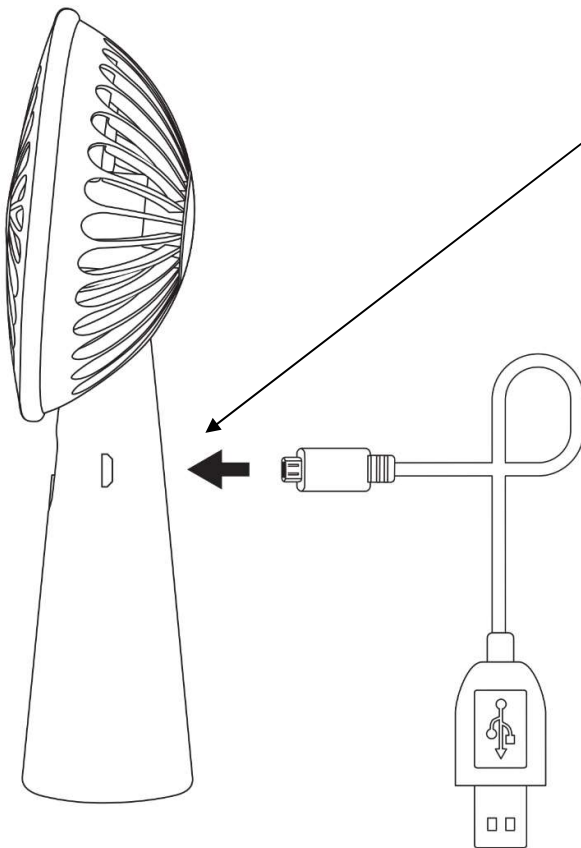

- 1) A 5V adapter will be needed to charge the fan. Please note that this adapter is not included.
- 2) Charge for 3 hours to ensure that the fan's battery is fully charged.
- 3) Do not charge the fan for more than 8 hours.

### Adding water to the fan's water tank:

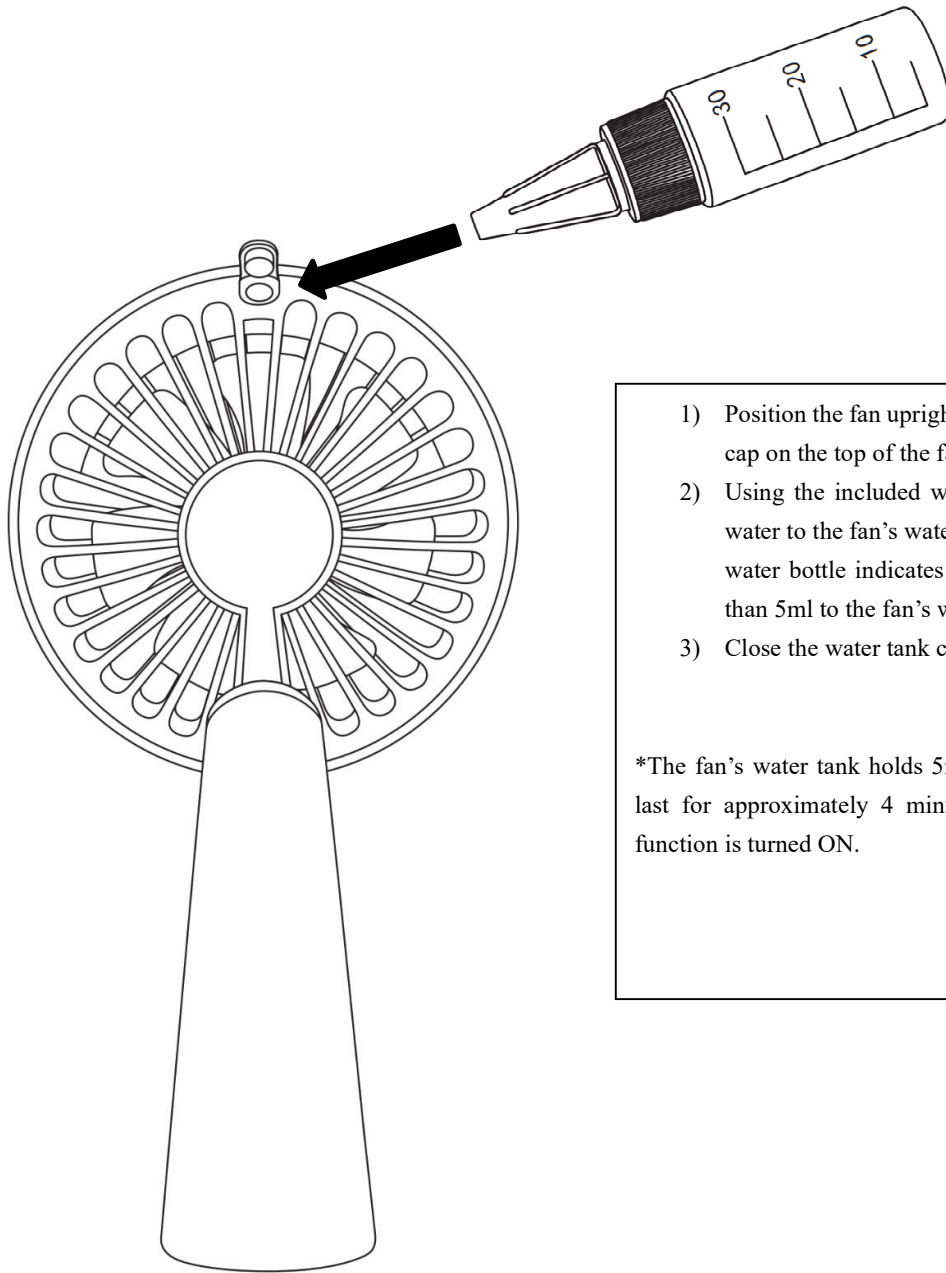

- 1) Position the fan upright and lift the water tank cap on the top of the fan.
- 2) Using the included water bottle, add 5ml of water to the fan's water tank. Each line on the water bottle indicates 5ml. Do not add more than 5ml to the fan's water tank.
- 3) Close the water tank cap.

\*The fan's water tank holds 5ml of water which will last for approximately 4 minutes when the misting function is turned ON.

### Electrical Specifications:

Charging Voltage	5V
Battery Size	500 mAh

**1 Year Limited Warranty:** This product is warranted to the original purchaser only for a period of 1 year from the date of purchase for products damaged due to defect in workmanship and materials. Proof of purchase is required to obtain warranty service. Warranty is for replacement only. No service parts are available for these products. No other warranties are expressed or implied.

For warranty service, please contact Blackstone International, Ltd. Customer Service by phone: 1-888-525-7969 or email: [customerservice@blackstoneltd.com](mailto:customerservice@blackstoneltd.com). A product may be submitted for warranty replacement by mailing the complete product along with proof of purchase to:

Blackstone International, Ltd.  
2018 Lord Baltimore Drive  
Baltimore, MD 21244

*This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.*