

**OUTDOOR REMOTE
CONTROL OUTLET 2-Pack
MODEL: BNC-60/154R**

TECHNICAL SPECIFICATIONS:

Voltage: 125VAC, 60Hz
Resistive: 15A 1875W
Tungsten: 10A 1250W
Transmission frequency: 433.92MHz
Remote battery: 12V 23A


PACKAGE CONTENTS:

(2) OUTDOOR OUTLET RECEIVERS ("Receiver") –
Figure 1


(2) REMOTE CONTROLS ("Remote") – Figure 2

(2) BATTERY TYPE: 12V 23A

**Figure 1
(Receivers)**

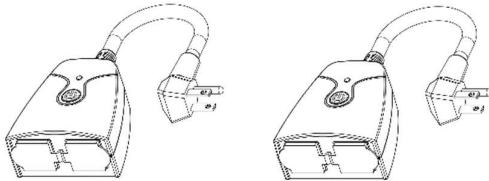 

**Figure 2
(Remotes)**

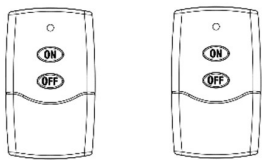 

BATTERY INSTALLATION/REPLACEMENT:

- Battery Installation/replacement:
 - Remove the two 12V 23A batteries from the bags.
 - Open the battery compartment on each Remote located on the back of the Remote (Figure 3). The battery compartment can be opened by pushing the top of the battery door down and sliding it off the Remote.


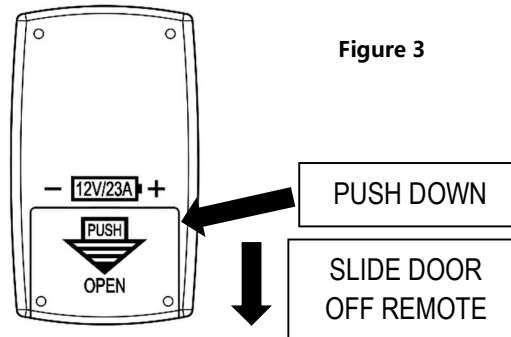 


Figure 3

- Replace the battery compartment door by sliding it towards the top of the Remote control.
- Test for proper function by pressing the ON button. A red light should briefly illuminate at the top of the Remote when the ON button is pressed (Figure 4).

 Figure 4

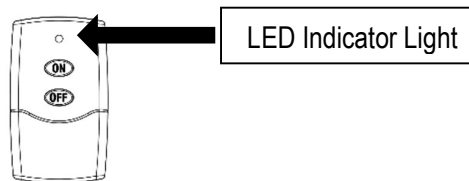

FEATURES:

- Outdoor Receivers are IPX4 water resistant when hung above the ground facing downwards. Do not submerge the outlets or operate near standing water.
- The Remotes can control the Receivers up to 100 feet away in line-of-sight
- In the event of a power outage, the Receiver will remain in the OFF setting until the power button on the Receiver is powered ON or the Remote is used to power the Receiver ON.
- Power output up to 1,875W at AC125V (60Hz)
DO NOT EXCEED A TOTAL OF 1,875W PER RECEIVER

SETUP/OPERATION:

- After installing the 12V 23A batteries in each of the Remotes, plug the Receivers into the desired grounded wall outlets.
- Receivers can be controlled using the included Remotes to turn ON/OFF or by using the manual power button located on the top of each Receiver.
- A red light will appear above the power button on the Receiver when the Receiver is powered ON.

WARNINGS:

- Regularly change the battery in Remote control for the best performance. If you find the outlet switches are not responding or the LED indicator on the Remote control becomes dim, the battery should be replaced
- Batteries should be recycled or disposed of as per Federal, State, and/or local guidelines.
- REMOTE CONTROLS (Figure 2) ARE NOT WATER RESISTANT AND ARE NOT MADE TO BE KEPT OUTDOORS– DO NOT EXPOSE THE REMOTE TO LIQUIDS OR STORE OUTDOORS
- Make sure the battery and outlets are installed firmly and correctly for safe operation.
- The outlet switches are intended for indoor and outdoor use.
- Use only in well-ventilated areas.
- Power output up to 1,875W at AC125V (60Hz) – **DO NOT EXCEED A TOTAL OF 1,875W PER RECEIVER**
- For best results, use type 12V 23A Alkaline batteries.
- Install only new batteries of the same type in your product.
- Failure to insert batteries in the correct polarity, as indicated above the battery compartment (Figure 3) may shorten the life of the batteries, cause batteries to leak, and will not allow the Remote to operate.
- Do not mix old and new batteries.
- Do not mix Alkaline, Standard (Carbon-Zinc) or

Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.

- DO NOT PLUG THE RECEIVERS INTO EXTENSION CORDS OR POWER STRIPS – they should only be plugged directly into a grounded wall outlet
- Do not place the Receivers on the ground. Each Receiver includes a hanger that can be used to securely hang the Receiver off the ground.
- Receivers must be plugged into a grounded wall outlet.
- Keep children away from the device.
- Do not operate near standing water.
- Make sure that the Receivers plug is fully inserted into a grounded wall outlet before operation.
- DO NOT EXCEED THE RECEIVER'S ELECTRICAL RATING
- **FCC STATEMENT:**

Caution:

This device complies with Part 15 of the FCC Rules / Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference. (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and Receiver.
- Connect the equipment into an outlet on a circuit different from that to which the Receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

PROGRAMMING THE OUTLETS:

Notes: The outlet is pre-programmed for immediate use but the configuration can be customized so that both outlets can be controlled using the same Remote.

1. Plug the Receiver into a grounded power outlet.
2. Press and hold the ON/OFF button on the Receiver outlet for 3 seconds until the LED indicator on the Receiver starts flashing slowly.
3. Release the ON/OFF button on the Receiver and press ON or OFF button on the Remote to pair the Remote to the Receiver.

RESETTING AN OUTLET:

Should you wish to unpair a Receiver from the Remote, or if your outlets are unresponsive to the Remote, the outlets can be reset following below steps

1. Remove the Receiver from the power outlet
2. Press and hold ON/OFF button on the outlet Receiver
3. While still holding the ON/OFF button, plug the Receiver into a power outlet and wait until the LED indicator light begins to flash
4. When the LED indicator light stops flashing, you may release the ON/OFF button, and the reset process is now complete
5. You may program the outlet after resetting

TROUBLESHOOTING

In the case the outlet Receiver does not respond to the Remote control, please follow the steps given below to resolve the issue:

1. Replace the battery in the Remote control
2. Make sure that the Receiver is correctly plugged into the power socket.
3. Make sure that the Receiver is used in an area with proper air circulation to avoid overheating.
4. Reset and program the outlet.

WARRANTY:

1 Year Limited Warranty: This product is warranted only to the original purchaser only for a period of 1 year from the date of purchase. The foregoing warranty shall only be applicable for products damaged due to defect in workmanship and materials. Proof of purchase is required to obtain warranty service. Warranty is for replacement only. No service parts are available for these products. No other warranties, express or implied, are included with the purchase of this product. Batteries are not covered and are excluded under this warranty.

For warranty service, please contact Blackstone International, Ltd. Customer Service by phone: 1-888-525-7969 or email: customerservice@blackstoneltd.com. A product may be submitted for warranty replacement by mailing the complete product along with proof of purchase to:
Blackstone International, Ltd.
2018 Lord Baltimore Drive
Baltimore, MD 21244

WARNINGS:

This product can expose you to chemicals including Di (2-ethylhexyl) phthalate (DEHP), which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.